

Grease maintenance with cooled oil (recommended)

1. Open the door; the base must remain open.
2. Set the temperature to program 10 or to 70° for type Sirius (ideal filter temperature).



3. Switch off the device.



4. Drain the oil.



5. Clean the tank.



After no more than 10 minutes:

6. Pump the oil back with the filter pump.
7. If you have no filter pump, carefully remove the container and empty it back into the tank.



8. Let the hot collection container cool off **outside** of the fryer and clean it.



Grease maintenance with hot oil (not recommended, high risk of burns)

1. Open the door; the base must remain open.

2. Switch off the device.

3. Drain the oil.

4. Clean the tank.

After no more than 10 minutes:

5. Pump the oil back with the filter pump.
6. If you have no filter pump, carefully remove the container and empty it back into the tank.

7. Let the hot collection container cool off **outside** of the fryer and clean it.

**Hot oil must not remain standing in the fryer's base to cool off.
This would damage the electronics!**

ATTENTION: Only perform any work with gloves, goggles and protective clothing.