 
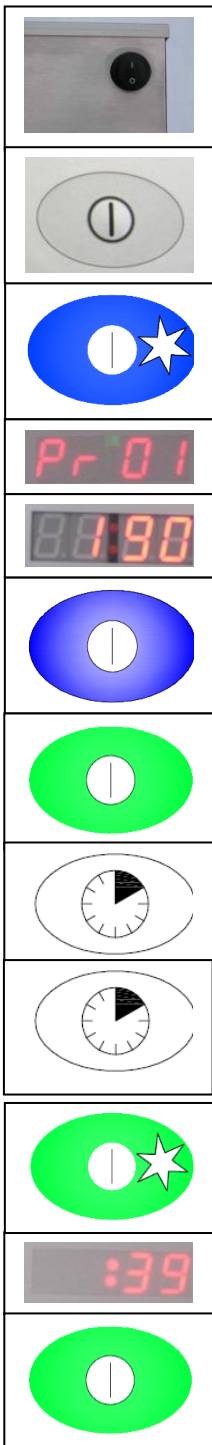 


Instructions Primus

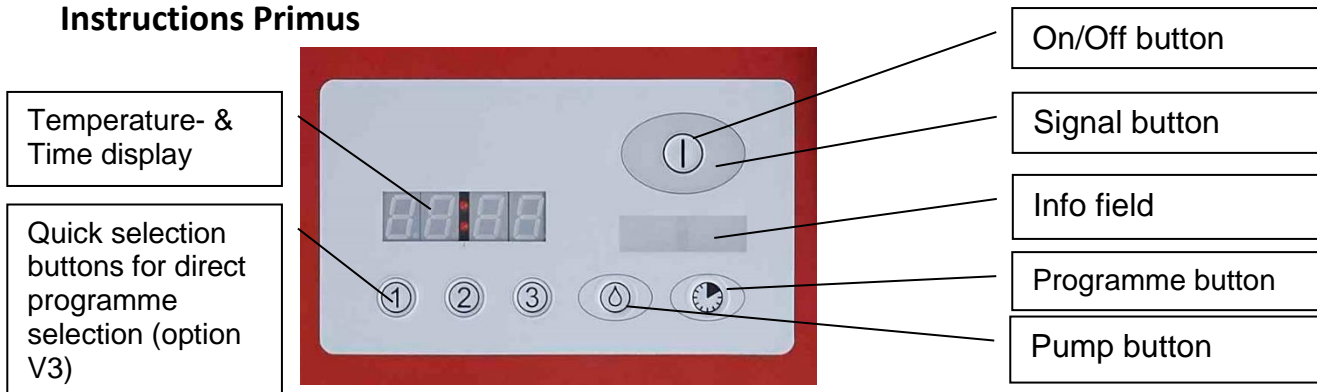

a) After testing if oil or fat level in the fryer is correctly switch on the on/off button behind the door on the control box casing. A signal sounds and all segments light up shortly (self-test of controller and safety device). During off hours set the on/off-button to "O".

b) Touch lightly the on/off- button on the bezel for power up the fryer.

c) The navigation light will come on and will be signaled with a blue light.

Simultaneously the light will flash the previously used programme.
 Programme 10 = cleaning programme adjustable temperature from 20 to 95°C.

The temperature control gauge.

d) After this 120°C turn off the heat from regular to constant heat. This will light blue.

e) After the wished and chosen temperature (E.g. 170°C) the signal will indicate green. The fryer is ready to be used.

f) By pressing the programme button for a short whilst you can start the programme chosen.
 The lift can also be used and will automatically react.

g) If you want to select another programme, keep the programme button pressed until the selection in the info field runs (1 - 10). Release the button at the desired programme. If the programme no. is not correct, press the programme button individually to select the desired programme. Option Quick-dial buttons 1 - 4: You can select programmes 1 to 4 directly via the quick-dial button.

 
h) Whilst the system and programme is in action and in process mode the light will blink.

The temperature and time is signified and will also show the time remaining.

i) At the end of the programme the signal will turn green.
 The lift goes up – during the lift term it sounds an acoustic signal.

Manual temperature setting by program 0

Temperature is lowered

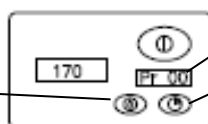

Programme setting No. 0

Temperature is raised

Changes by shortly pressing

