
Kienle GmbH • D-72469 Meßstetten • Tel. 0049 7579 9200 www.kienle-fritteusen.de • info@kienle-wv.de



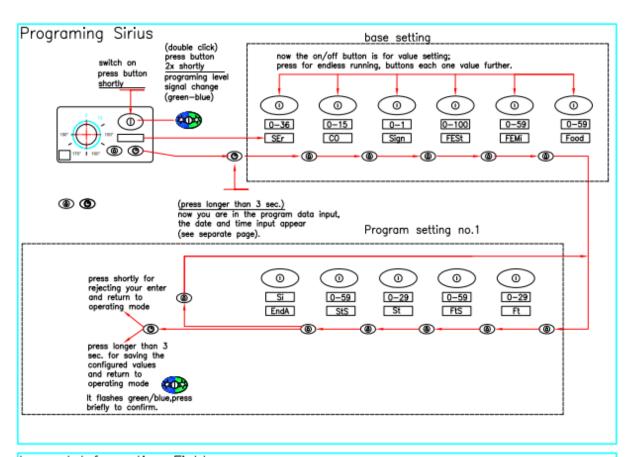

Legend Information Field

Service intervals in months. (0-36) SEr

Code input for Service only. CO

Audible signals of the base setting on (1) or off (0) Sign

FESt Enter/input of time of fat use in hours (0-100)

FEMi Enter/input of time of fat use in minutes (0-59)

Setting of time for transition in standby mode (0-59)

Pr Selection of the program number

tΕ Setting of temperature

Ft Frying time in minutes (0-29)

Frying time in seconds (0-59) FtS

St Shaker time in minutes (0-29)

StS Shaker time in seconds (0-59)

EndA End action after finishing of the frying process (Si-Signal)

when 0 is entered the actuator is deselected and not in function

The time of fat use is a time value determined by the client, which states nothing about the level of perishability of fat. Therefore, we recommend to use appropriate means, e.g. fat test devices.

205266 1.6.2018